

Scag 48087

Where Used List

Models:

SMZ-48 (4210001-4219999)

SR-18B (001-UP)

SSZ-16BV (30000-39999)

SSZ-18BV (30000-39999)

SSZ-18CV (50000-59999)

SSZ-18CV (60001-69999)

SSZ-18CV (70000-79999)

SSZ-18CV-48 (3440001-3449999)

SSZ-18CV-48 (4200001-4209999)

SSZ-18KH (30000-39999)

SSZ-20CV (50000-59999)

SSZ-20CV (60001-69999)

SSZ-20CV (70000-79999)

SSZ-22CV (4230001-4239999)

SSZ-22CV (50000-59999)

SSZ-22CV (60001-69999)

SSZ-22CV (70000-79999)

SSZ4216BV (40000-49999)

SSZ4816BV (40000-49999)

SSZ4818CV (40000-49999)

ST-11B (1001-UP)

ST-12B (0001-0468)

ST-12B (0469-UP)

ST-13K (1001-1214)

ST-13KA (1215-UP)

ST-17KA (1001-1270)

ST-17KA (1271-1509)

ST-18B (1001-3908)

ST-18KH (1001-1464)

ST-18KH (1465-UP)

STH-13BV (1001-UP)

STH-13KH (1001-UP)

STH-18KH (1001-UP)

STH-20KH (1001-UP)

SW-12B-0001

SW-13BV (1001-1150)

SW-13K-0001

SW-13KH (1001-1400)

SW-14KA (60001-69999)

SW-14KA (70000-79999)

SW-14KA-10000

SW-14KA-40000

SW-14KA-50001

SW-14KH-10000

SW-14KH-40000

SW-14KH-50001

SW-16BV (60001-69999)

SW-16BV (70000-79999)

SW-16BV-40000

SW-16BV-50001

SW-16BVE-50001

SW-17KA (S/N 4690001-4699999)

SW-18B-0690

SW-18BV (60001-69999)

SW-18BV (70000-79999)

SW-18BV-40000

SW-18BV-50001

SW-18CVE (60001-69999)

SW-18CVE (70000-79999)

SW-18CVE-40000

SW-18CVE-50001

SW-18EKH (1001-UP)

SW-18KH (METAL TANKS, NO OPERATOR CONTROLS)

SW-18KH-10000

SW-18KH-1801

SW-20EKH (1001-UP)

SW-20KHE-10000

SW-48V-14FS Walk-Behind (S/N S2500001-S2599999) Part No.
06362

SW32-12B (METAL TANKS, NO OPERATOR CONTROLS)

SW32-12B (PLASTIC TANKS, OPERATOR CONTROLS)

SW32-13BV (1001-1116)

SW32-13KA-40000

SW32-13KA-50001

SW36-12B (METAL TANKS, NO OPERATOR CONTROLS)

SW36-12B (PLASTIC TANKS, OPERATOR CONTROLS)

SW36-12BS (PLASTIC TANKS, OPERATOR CONTROLS)

SW36-13BV (1001-1393)

SW36-13K (METAL TANKS, NO OPERATOR CONTROLS)

SW36-13K (PLASTIC TANKS, OPERATOR CONTROLS)

SW36-13KA (40000-49999)

SW36-13KA (4522-UP)

SW36-13KA (50000-59999)

SW36-13KA-10000

SW36-13KH (1001-UP)

SW36-13KH (40000-49999)

SW36-13KH (50000-59999)

SW36-13KH-10000

SW36-8J (METAL TANKS, NO OPERATOR CONTROLS)

SW36-8J (OPERATOR CONTROLS, 4 & 5 SPEED TRANSMISSIONS)

SW36-8J (PLASTIC TANKS, OPERATOR CONTROLS)

SW48-12B (METAL TANKS, NO OPERATOR CONTROLS)

SW48-12B (PLASTIC TANKS, OPERATOR CONTROLS)

SW48-13BV (1001-1402)

SW48-13K (METAL TANKS, NO OPERATOR CONTROLS)

SW48-13K (PLASTIC TANKS, OPERATOR CONTROLS)

SW48-13KA (1001-5291)

SW48-13KH (1001-2200)

SW48-14KA (60001-69999)

SW48-14KA (70000-79999)

SW48-14KA (S/N 3140001-3149999)

SW48-14KA (S/N 4000001-4009999)

SW48-14KA-10000

SW48-14KA-40000

SW48-14KA-50001

SW48-14KAE (60001-69999)

SW48-14KAE (70000-79999)

SW48-14KAE (S/N 3160001-3169999)

SW48-14KAE-50001

SW48-14KH (60001-69999)

SW48-14KH (70000-79999)

SW48-14KH (S/N 3150001-3159999)

SW48-14KH-10000

SW48-14KH-40000

SW48-14KH-50001

SW48-15KH (S/N 4010001-4019999)

SW48-16BV (60001-69999)

SW48-16BV (70000-79999)

SW48-16BV (S/N 3170001-3179999)

SW48-17KA (S/N 3180001-3189999)

SW48-17KA (S/N 4020001-4029999)

SW48A-14KA (S/N 7090001-7099999)

SW48A-15KA (S/N 7340001-7349999)

SW48A-15KA (S/N 8060001-8069999)

SW48A-15KA (S/N 8950001-8959999)

SW48A-15KA (S/N A0500001-A0599999)

SW48A-15KH (S/N 7100001-7109999)

SW48A-15KH (S/N 8070001-8079999)

SW48A-15KH (S/N 8960001-8969999)

SW48A-15KH (S/N A0600001-A0699999)

SW48A-17KA (S/N 6170001-6179999)

SW48A-17KA (S/N 7350001-7359999)

SW48A-17KA (S/N 8080001-8089999)

SW48A-17KA (S/N 8980001-8989999)

SW48A-17KA (S/N A0800001-A0899999)

SW48A-18HN (S/N 9610001-9619999)

SW48V-14FS (S/N J6200001-J6299999)

SW48V-14FS (S/N N4300001-N4399999) Part No.6315

SW48V-14FS Walk-Behind (S/N K8800001-K8899999)

SW48V-14FS Walk-Behind (S/N N4300001-N4399999) Part No.
06315 Rev.1

SW48V-15KA Walk Behind (S/N B1300001-B1399999)

SW48V-15KH (S/N D6000001-D6099999)

SW48V-15KH Walk Behind (S/N B1400001-B1499999)

SW48V-15KH Walk Behind (S/N C3300001-C3399999)

SW48V-16FS (S/N F1500001-F1599999)

SW48V-16KAI (S/N D6100001-D6199999)

SW48V-16KAI Walk Behind (S/N C0600001-C0699999)

SW48V-16KAI Walk Behind (S/N C3400001-C3499999)

SW48V-17KAI Walk Behind (S/N C0700001-C0799999)

SW48V-481FS (S/N F9800001-F9899999)

SW48V-481FS (S/N H2500001-H2599999)

SW52-13K (METAL TANKS, NO OPERATOR CONTROLS)

SW52-13K (PLASTIC TANKS, OPERATOR CONTROLS)

SW52-18KH (PLASTIC TANKS, OPERATOR CONTROLS)

SW52V-15FS (S/N J6300001-J6399999)

SW52V-15FS Walk-Behind (S/N K8900001-K8999999)

SW52V-17KAI (S/N D6200001-D6299999)

SW52V-18FS (S/N F1600001-F1699999)

SW52V-541FS (S/N F1600001-F1699999)

SW52V-541FS (S/N H2600001-H2699999)

SW61-18KH (PLASTIC TANKS, OPERATOR CONTROLS)

SWM-52V (S/N D5400001-D5499999)

SWU48-17KA (S/N 4760001-4769999)

SWU48A-17KA (S/N 6200001-6209999)

SWU52A-17KA (S/N 6210001-6219999)

SWZ (60001-69999)

SWZ-14KA (1001-UP)

SWZ-14KA (3300001-3309999)

SWZ-14KA (40000-49999)

SWZ-14KA (50000-59999)

SWZ-14KA-10000

SWZ-14KH (1001-UP)

SWZ-14KH (40000-49999)

SWZ-14KH (50000-59999)

SWZ-14KH-10000

SWZ-16BV (3310001-3319999)

SWZ-16BV (70000-79999)

SWZ-16BV-40000

SWZ-16BV-50001

SWZ-16BVE (3320001-3329999)

SWZ-16BVE (70000-79999)

SWZ-16BVE-50001

SWZ-17KA (S/N 9150001-9159999)

SWZ-18BV (3330001-3339999)

SWZ-18BV (70000-79999)

SWZ-18BV-40000

SWZ-18BV-50001

SWZ-18KH (1001-UP)

SWZ-18KH-10000

SWZ-20CVE (3340001-3349999)

SWZ-20CVE (70000-79999)

SWZ-20CVE-40000

SWZ-20CVE-50001

SWZ-20KHE (1001-UP)

SWZ-20KHE-10000

SWZ-21KAE (S/N 9160001-9169999)

SWZ-48V-15FSE Walk-Behind (S2800001-S2899999) Part No. 06363

SWZ32-13KA-40000

SWZ36-14KA (1001-2000)

SWZ36-14KA-10000

SWZ36-14KA-40000

SWZ36-14KA-50001

SWZ36-14KH (1001-2000)

SWZ36-14KH-10000

SWZ36-14KH-40000

SWZ36-14KH-50001

SWZ36A-16FS-LE (S/N F1800001-F1899999)

SWZ48-14KA (1001-2000)

SWZ48-14KA (3250001-3259999)

SWZ48-14KA (4060001-4069999)

SWZ48-14KA (70000-79999)

SWZ48-14KA (S/N 5140001-5149999)

SWZ48-14KA-10000

SWZ48-14KA-40000

SWZ48-14KA-50001

SWZ48-14KAE (3270001-3279999)

SWZ48-14KAE (70000-79999)

SWZ48-14KAE-50001

SWZ48-14KH (1001-2000)

SWZ48-14KH (3260001-3269999)

SWZ48-14KH (70000-79999)

SWZ48-14KH-10000

SWZ48-14KH-40000

SWZ48-14KH-50001

SWZ48-15KH (4070001-4079999)

SWZ48-15KH (S/N 5150001-5159999)

SWZ48-16BV (3280001-3289999)

SWZ48-17KA (3290001-3299999)

SWZ48-17KA (4080001-4089999)

SWZ48-17KA (S/N 5160001-5169999)

SWZ48A-17KA (S/N 5170001-5179999)

SWZ48A-17KA (S/N 6260001-6269999)

SWZ48A-17KA (S/N 7380001-7389999)

SWZ48A-17KA (S/N 8120001-8129999)

SWZ48A-17KA (S/N 9040001-9049999)

SWZ48A-17KA (S/N A1600001-A1699999)

SWZ48A-17KAE (S/N 8130001-8139999)
SWZ48A-17KAE (S/N 9050001-9059999)
SWZ48A-17KAE (S/N A1700001-A1799999)
SWZ48A-18HN (S/N 9620001-9629999)
SWZ48A-18HN (S/N A1800001-A1899999)
SWZ48V-15FS (S/N J6500001-J6599999)
SWZ48V-15FS (S/N N4600001-N4699999) Part No.06316
SWZ48V-15FS Walk-Behind (S/N K9100001-K9199999)
SWZ48V-17KAI (S/N D4600001-D4699999)
SWZ48V-17KAI Walk Behind (S/N C1000001-C1099999)
SWZ48V-17KAI Walk Behind (S/N C3800001-C3899999)
SWZ48V-17KAIE Walk Behind (S/N C1100001- C1199999)
SWZ48V-18FS (S/N F1900001-F1999999)
SWZ48V-18FS-LE (S/N F2000001-F2099999)
SWZ48V-18HN Walk Behind (S/N B2200001-B2299999)
SWZ48V-541FS (S/N G0100001-G0199999)
SWZ48V-541FS (S/N H2800001-H2899999)
SWZ52V-17KAI (S/N D4700001-D4799999)
SWZ52V-18FS (S/N J6600001-J6699999)
SWZ52V-18FS Walk-Behind (S/N K9200001-K9299999)
SWZ52V-19KAI (S/N D4800001-D4899999)
SWZ52V-20FS (S/N F2100001-F2199999)

SWZ52V-600FS (S/N G0200001-G0299999)

SWZ52V-600FS (S/N H2900001-H2999999)

SWZL52V-18FS Walk-Behind (S/N M1600001-M1699999)

SWZL52V-22FSE (S/N N5200001-N5299999) Part No.06316

SWZU36-15KH (S/N 4780001-4789999)

SWZU48-17KA (S/N 4790001-4799999)

SWZU48-17KA (S/N 5270001-5279999)

SWZU48A-17KA (S/N 6350001-6359999)

SWZU48A-17KA (S/N 7410001-7419999)

SWZU48A-17KA (S/N 8170001-8179999)

SWZU48A-17KA (S/N 9110001-9119999)

SWZU48A-18HN (S/N 9630001-9639999)

SWZU52-17KA (S/N 5280001-5289999)